


SUPERVISOR

One of the odd numbered terminals 91, 93, 95, 97, 99, 101, 103, 105 must be used as the transducer input when connecting powered transducers to the Site Supervisor (see the numbered analog inputs).

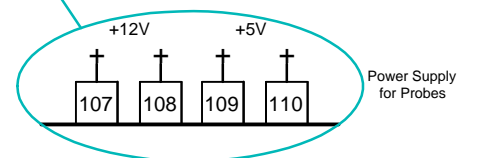

EMERSON COMMERCIAL AND RESIDENTIAL SOLUTIONS
 WWW.EMERSON.COM
 For Technical Support: SolutionsTechSup@Emerson.com

TITLE : SUPERVISOR WITH 24VDC POWER SUPPLY			NOTES / REMARKS :	SHEET NO : A 126
PROJECT : COMMERCIAL & RESIDENTIAL SOLUTIONS - TYPICAL INSTALLATION DETAILS				
NOTED/ REVIEWED BY : CAR	CADD BY : JV	FILE NAME A126 SUPERVISOR WITH 24VDC POWER SUPPLY	REVISION AND DATE: Rev2 - 060619	