

# Programmable Touchscreen Thermostat and Supervisor Version Compatibility

## Technical Bulletin

This bulletin includes all supported Programmable Touchscreen Thermostat versions in Supervisor.


\*Indicates the Touchscreen Thermostat version is compatible with Supervisor version but will not have Fan "On" mode.

Programmable Touchscreen Thermostat		Supervisor Version			
Fan Feature	Version	2.13	2.14	2.15	Above
Fan Mode - Cool, Heat, Auto	1.06	*	*	*	*
Fan Mode - Auto, On	1.07	*	*	✓	✓

Touchscreen Thermostat and Supervisor Compatibility Matrix



### Fan Mode Display - Version 1.06

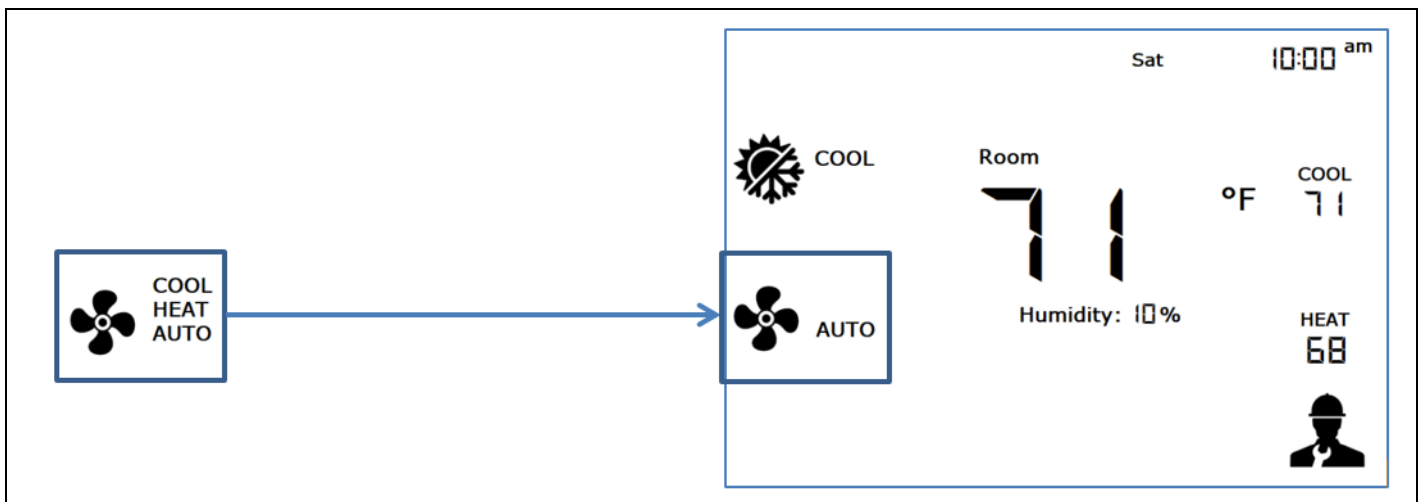

Fan Mode	Description
COOL	Fan will be activated when thermostat is in active cooling mode only.
HEAT	Fan will be activated when thermostat is in active heating mode only.
AUTO	Fan will be activated when thermostat is in either cooling or heating mode.

Version 1.06 Fan Mode Details

## Fan Mode Display - Version 1.07

When FAN\_MODE is AUTO:

- Fan icon is displayed
- The text AUTO is displayed.
- The fan indicator (four dashes over the fan) is displayed according to heating or cooling status.



When FAN\_MODE is ON:

- Fan icon is displayed.
- No text is displayed.
- The fan indicator (four dashes over the fan) will be displayed as long as the FAN\_MODE is ON.



Fan Mode	Description	Output Activation	Output Display (on GUI)
AUTO	Fan will be activated when either cooling or heating call is active.	0% (OFF)	
		100% (ON)	
ON	Fan stays active (ON) independently of “Thermostat mode” or heating and cooling conditions.	100% (ON)	

Version 1.07 Fan Mode Details